




SINGLE BLYND ASSEMBLY INSTRUCTIONS

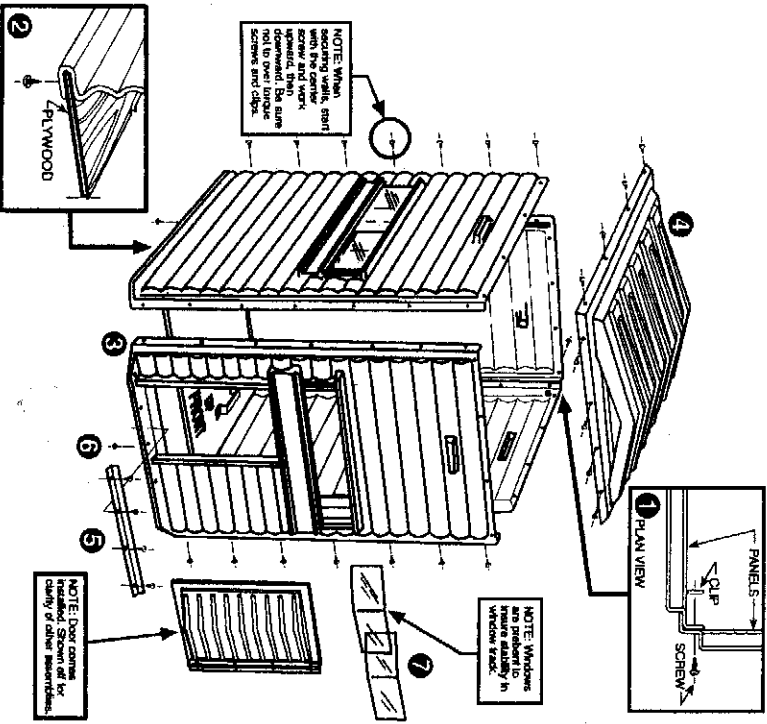

a product of

PLASTIC VACUUM FORMING, INC.

© 2003 PLASTIC VACUUM FORMING, INC.

12103 Radium Dr. • San Antonio, Texas • 78216 • 210-344-8311 • 1-800-534-0263

HELPFUL HINT:
It is recommended that you enlist the aid of a "helper" to assist in the assembly of "The Blynd".

NOTE:
Anchoring system is owner's responsibility.
Plastic Vacuum Forming, Inc. assumes no liability for injury or damage to persons or property resulting from the use of its products or services. The products that we sell must be assembled, installed, anchored and used with care, caution, and common sense.

Please read all instructions before starting assembly.

RECOMMENDED TOOLS:
Cordless Drill
Phillips Head Bit

BOXED:
Assembly Instructions & Item Listing Sheet
(1) Door
(2) Side Walls
(3) Door Side
(4) Roof
(5) 4 X4 Plywood Floor
(6) Windows
(7) Package Screws & Clips
(8) Package Door Hardware
(9) Aluminum Bottom Door Stop

- INSTRUCTIONS:**
- 1 Place back panel between helper or a stable object. Overlap corner panels as shown and secure each side panel to back panel with seven screws and clips.
 - 2 Slide plywood into bottom of back and side panel slots. NOTE: Plywood must be positioned with side marked "Up" as shown. Extend the life of the floor with an exterior oil based paint or waterseal product.
 - 3 Slide front panel into position and secure to sides.
 - 4 Position top over wall flanges. From inside push upper panel against roof flange and secure each side with screws and clips.
 - 5 Line up door stop and secure to floor flange as shown with flange turned outward.
 - 6 Turn "The Blynd" on side and secure plastic flanges to plywood. See illustration 2.
 - 7 Install windows with bean side facing out.
- NOTE: Floor handle only comes with a Tower Kit. To assemble use holes provided in floor to locate and install handle. Use two 1/4" x 20 x 1-1/4" Hex Capscrews, 5/16" fender washers, and 1/4" x 20 Hex Nuts to secure.

