




# DOUBLE WIDE BLYND ASSEMBLY INSTRUCTIONS

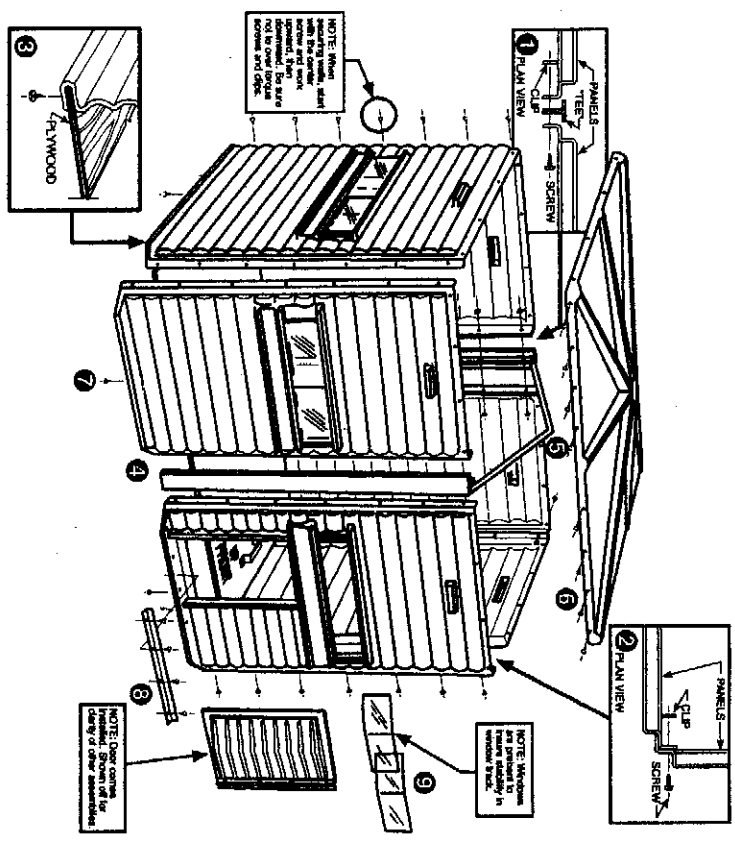

© 2003 PLASTIC VACUUM FORMING, INC.

*a product of*  
**PLASTIC VACUUM FORMING, INC.**  
 1310 Zandbergen, Tx • San Antonio • Texas • 78216 • 710-544-9231 • 1-800-458-0285

**HELPFUL HINT:**  
 It is recommended that you enlist the aid of a "helper" to assist in the assembly of "The Blynd".

**NOTE:**  
 Anchoring system is owner's responsibility.

Plastic Vacuum Forming, Inc. assumes no liability for injury or damage to persons or property resulting from the use of its products or services. The products that we sell must be assembled, installed, anchored and used with care, caution, and common sense.

Please read all instructions before starting assembly.

**RECOMMENDED TOOLS:**

- Cordless Drill
- Phillips Head Bit

**BOXED:**

- Assembly Instructions & Item Listing Sheet
- (1) Door
  - (5) Side Walls
  - (1) Door Slide
  - (1) 4"x8" Roof
  - (1) 4"x8" Plywood Floor
  - (12) Windows
  - (1) Package Screws & Clips
  - (1) Package Door Hardware
  - (1) Aluminum Bottom Door Stop
  - (2) Aluminum Piers (w/ L Bracket supports at bottom)
  - (1) Roof Support Brace (connects to top of Piers)

**INSTRUCTIONS:**

- 1 Join back panels and front panels together with tee leg sandwiched between. Use screen screws and clips per panel assembly. See detail.
- 2 Place back panel between helper or a stable object. Overlap corner panels as shown and secure each side panel to back panel with screen screws and clips.
- 3 Slide plywood into bottom of back and side panel slots. NOTE: Plywood must be positioned with side marked "UP" as shown. Extend the life of the floor with an exterior oil based paint or waterseal product.
- 4 Slide front panel into position and secure to sides.
- 5 Connect roof support brace.
- 6 Position top over wall flanges. From inside push upper panel against roof flange and secure each side with screws and clips.
- 7 Turn "The Blynd" on side and secure plastic flanges to plywood. See illustration 3.
- 8 Line up door stop and secure to floor flange as shown with flange turned outward.
- 9 Install windows with bent side facing out.

NOTE: Floor handle only comes with a Tower Kit. To assemble use holes provided in floor to locate and install handle. Use two 1/4" 20x1-1/4" Hex Capscrews, 5/16" fender washers, and 1/4" 20 Hex Nuts to secure.

